

VS Series

VESSEL & REACTOR VALVES

SPRAY & RINSE VALVES



PROCESS VALVES

CLEANING VESSELS OR REACTORS WITHOUT OPENING TO ATMOSPHERE

Code: **VRR-VRS**

Spray & Rinse Valves

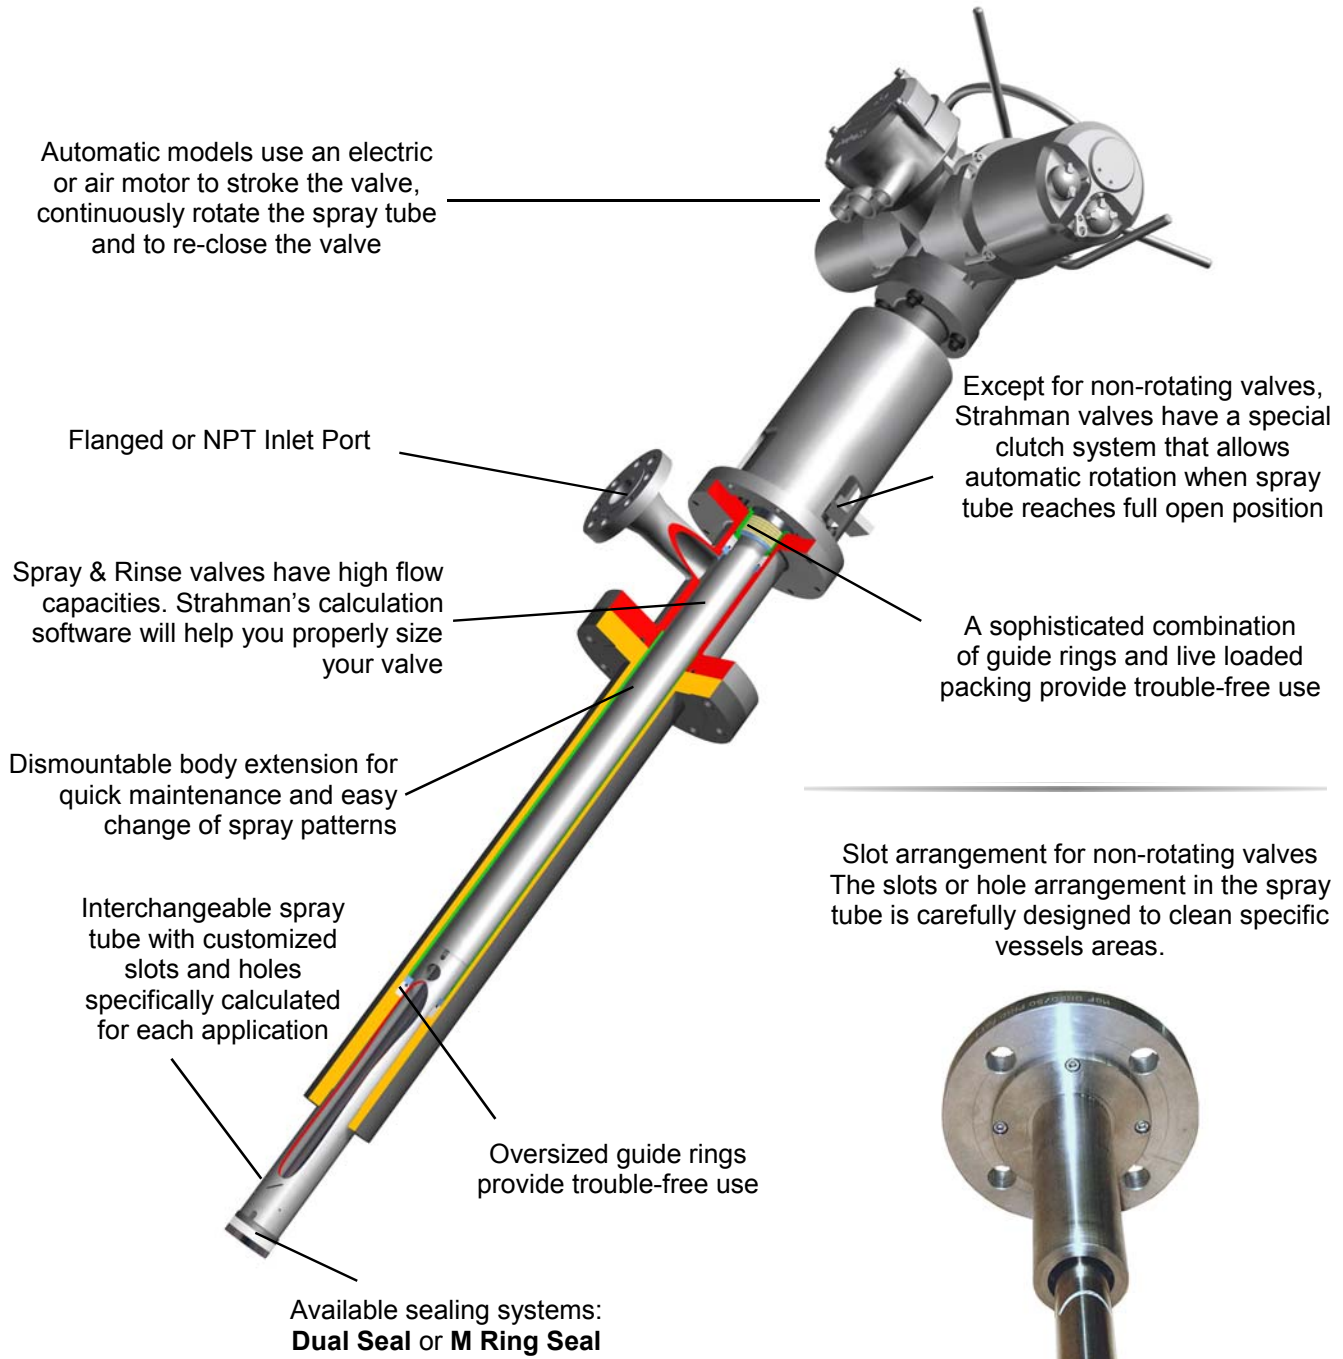


Fig. 800

Fig. 810

Strahman **Spray & Rinse** valves are designed to clean vessels and reactors without the need to open them to atmosphere. The advantage of the closed cleaning technology is the protection of operators and the environment against hazardous products found in processes like VCM and PVC.

Rinse valves are used on batch processes to clean vessels between batches. With closed technology and clean reactors the plant is able to reduce the time between batches and increase production & plant efficiency.

Strahman manufactures two types of Spray & Rinse designs: **Rotating valves and non-rotating valves.**

Rotating Valves- Depending upon the reactor size one rotating rinse valve is usually sufficient to clean a reactor.

Non-rotating Valves- These small capacity spray valves are generally used on very small reactors or as a supplementary "spot cleaner" to the **Rotating Spray & Rinse valves.**

Strahman uses a unique in-house calculation software program to assist in proper sizing and location of the valves. The information required includes:

- Reactor height
- Reactor diameter
- Location and dimensions of baffles
- Dimensions and position of agitator
- Quantity, size and location of available nozzles
- Available flow rates and pressure of cleaning liquid
- Required impact forces

In the event the required impact force is not known, our engineers will assist you in selecting the appropriate value.

BODY ARRANGEMENTS

Strahman has two Soft Seal Piston Valve styles available:

- Figure **800** is for large size **Rotating** valves with non-rising stem design.
- Figure **810** is for small size **Non-Rotating** valves with rising stem design.

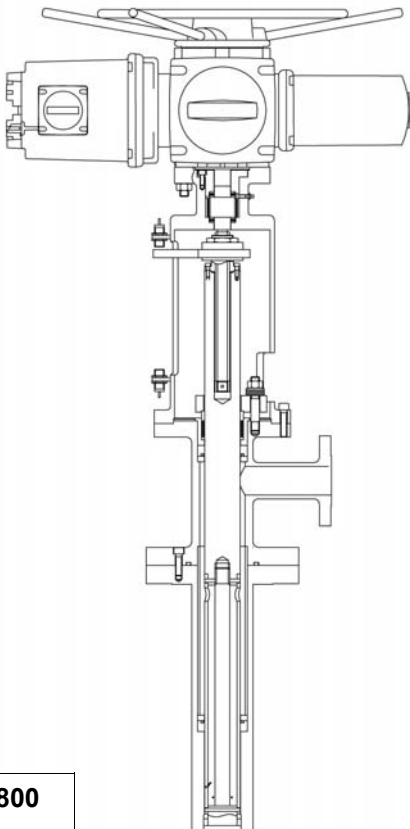


Fig. 800



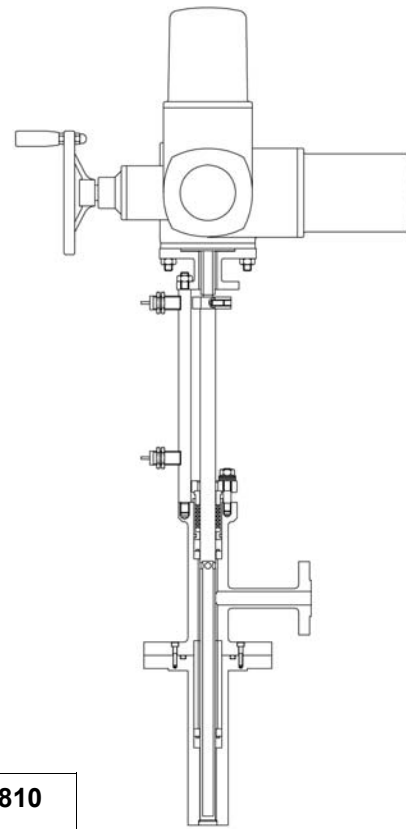


Fig. 810


MULTI-POSITION & BOTTOM VESSEL SAMPLING

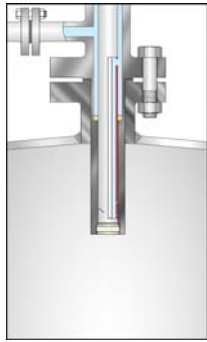


Step 1
During the process reaction the valve is closed. The Dual Seal or M Ring provides a tight seal and protects the spray holes and slots from clogging.

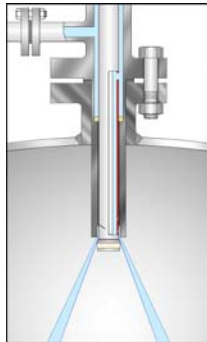


Step 2
When valve starts to open the first spray tube openings are released and will begin cleaning the bottom of the reactor. During this step additional products can be injected.

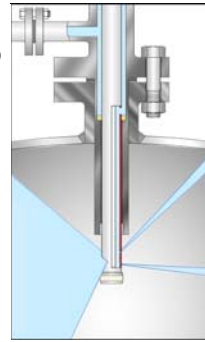


Step 3
After the full 200 mm linear stroke, the spray holes & slots are released. The full spray pattern will begin cleaning the reactor.

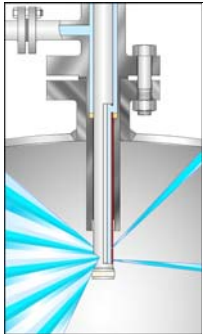

Step 4
When the valve reaches full stroke, the special clutch mechanism will start to rotate the spray tube for full cleaning of all reactor areas.

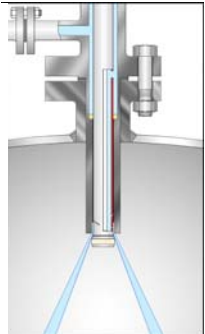


Step 5
After cleaning the spray tube will be retracted. This automatically stops rotation of the tube. Water pressure is maintained during closing to clean the spray tube and prevent clogging.

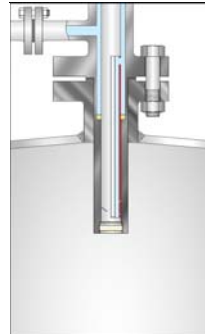

Step 6
The valve is completely closed and ready for a next cleaning session.

IN-HOUSE SPRAY & RINSE SELECTION SOFTWARE

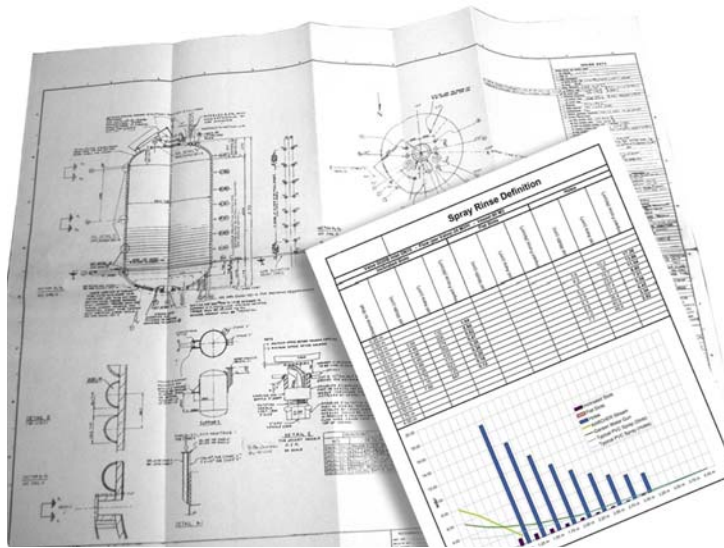


Size Code	0020B	0025B	004B	005B	0065B	0080B	0100B
Flow Capacity (m ³ /h)	5	10	20	30	50	70	100
Code / Figure	VSS / 810	VSS / 810	VSR / 800	VSR / 800	VSR / 800	VSR/ 800	VSR / 800
Inlet Connection	DN15 1/2 "	DN20 3/4"	DN32 1-1/4"	DN40 1-1/2"	DN50 2"	DN65 2-1/2"	DN80 3"
Vessel Connection	DN50 2"	DN65 2-1/2"	DN80 3"	DN100 4"	DN125 5"	DN125 5"	DN150 6"
Maximum Rating	PN150 900 LBS.	PN150 900 LBS.	PN100 600 LBS.	PN100 600 LBS.	PN100 600 LBS.	PN50 300 LBS.	PN50 300 LBS.
Standard Stroke	200 MM 8"						

SEALING SYSTEM

Dual Seal


The **Dual Seal** is the standard sealing system for Spray & Rinse valves. The piston head operates within a cylindrical seal. The secondary resilient seal ring is mounted on the piston head and expands after metal to metal contact of the primary seat ring.

Temperature
Min: -50° C / -60° F
Max: 200° C / 390° F
Pressure
Max: 150 bar / 3550 psig

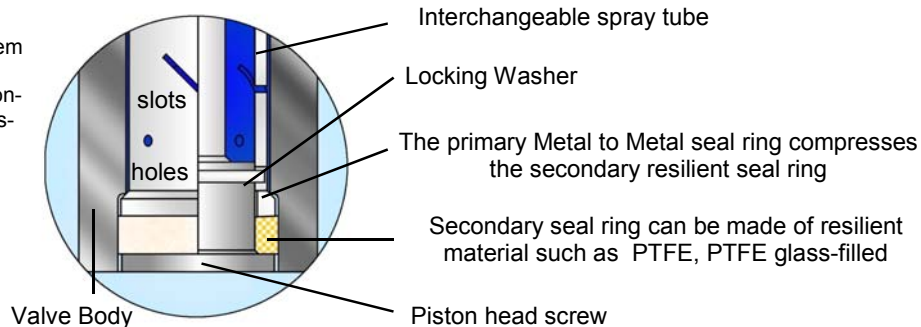


M Ring Seal-

The **M Ring Seal** provides the Spray & Rinse valves with metal to metal sealing. The sealing system is based on a differential between the body & disc seat surface. The replaceable metallic seal ring is made of aluminum, nickel or titanium and provides excellent sealing performance especially in cases of temperatures above 200° C

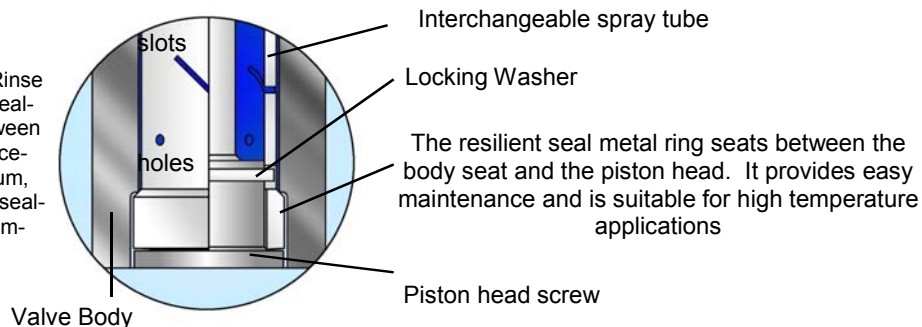


Guiding Spray & Rinse

Spray & Rinse Valves cycle frequently. In order to provide the reliability of the rotating components Strahman has developed a very resistant and easy to maintain guiding system.

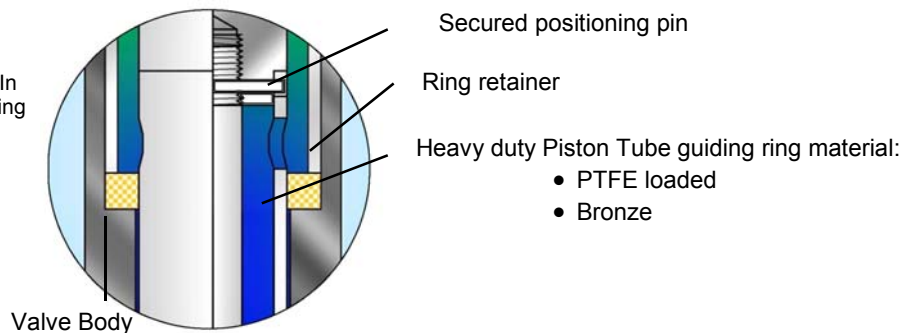

VESSEL CONNECTIONS

To connect valves to existing vessels or reactors, there are two possibilities: a nozzle or a pad connection. In both cases, the customer must specify the following vessel connection details: « **D** » (inside diameter), « **H** » (height), **DN** (nominal size), **PN** (pressure rating) and connection **standard** (ISO, ANSI, DIN, etc.). To eliminate retention areas radius « **R** » can be specified for optional contouring. For new projects Strahman can supply valves with easy-to-fit standardized pads that are ready to be installed.

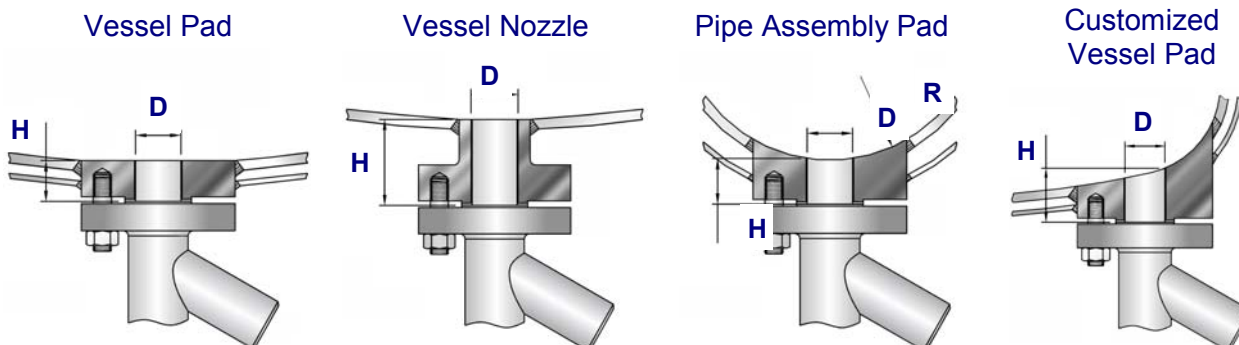


PACKING DEFINITION

Typical Packing Materials:

- PTFE
- PTFE / Aramide Braid
- Carbon / Graphite Braid
- Graphite Braid
- PTFE /Aramide Braid + Graphite
- Lamellar + Expanded Graphite
- Pure Graphite

Live loaded packing arrangement minimizes valve maintenance

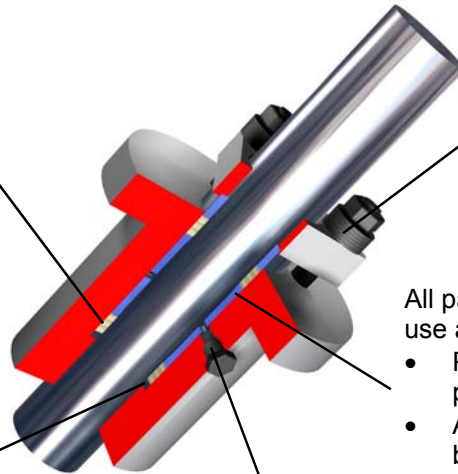

Bottom ring material is selected with a differential hardness from the piston to prevent piston damage

All packing arrangements use a lantern ring that:

- Provides better stem piston guiding
- Avoids dead space in body cavities

Optional 1/4 inch NPTF available for leak detection or inert gas injection to avoid leakage to atmosphere by creating an over pressure


STANDARD PAD GASKET RANGE

- | | |
|---|--|
| <ul style="list-style-type: none"> • PTFE • Aramide / Nitrile • Carbon / Aramide • Laminated Graphite • Laminated Graphite / 316 • Spiral Wound 316L / PTFE • Spiral Wound 316L / Graphite • Spiral Wound 321 / Graphite • Spiral Wound Inconel / Graphite • Spiral Wound Titanium / Graphite • Perfluoroelastomer (Kalrez) O Ring | <ul style="list-style-type: none"> • Welded Lips • Metallic O Ring Helicoflex Gasket Aluminium/316 • Metallic O Ring Helicoflex Gasket Nickel/Nimonic 90 • 316L RTJ • Nitrile O Ring • EPDM O Ring • Silicone O Ring • Fluorocarbon (Viton) O Ring • Silicone FEP Jacketed O Ring |
|---|--|

AVAILABLE STANDARD GASKET RANGE

- | | |
|--|--|
| <ul style="list-style-type: none"> • PTFE • Aramide / Nitrile • Carbon / Aramide • Laminated Graphite • Laminated Graphite / 316 • Nitrile O Ring • EPDM O Ring | <ul style="list-style-type: none"> • Silicone O Ring • Fluorocarbon (Viton) O Ring • Silicone FEP Jacketed O Ring • Perfluoroelastomer (Kalrez) O Ring |
|--|--|

Valve Coding System

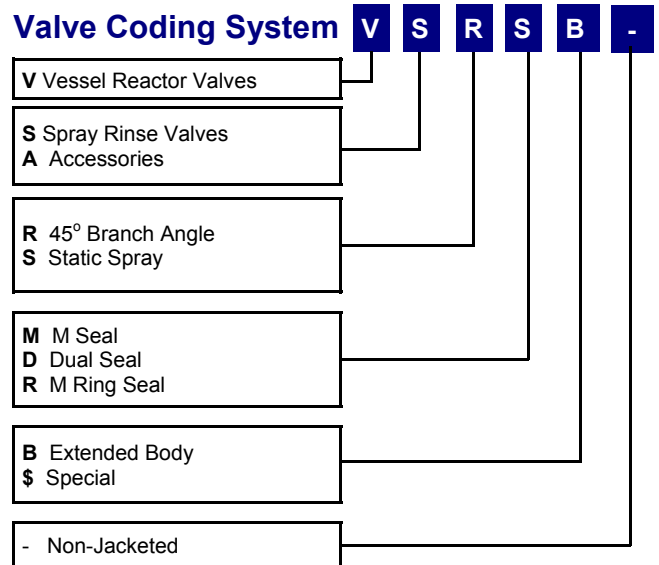

TECHNICAL & GENERAL INFORMATION

Design Code & Construction

- Design standard compliant with ASME B16.34
- International standards include ANSI, DIN, JIS, API etc.
- Wide range of material selections including carbon steel / stainless steel / Titanium / Hastelloy / Duplex / Monel / Tantalum / Zirconium
- Fabricated, cast, forged and bar stock designs
- Combinations of fabricated, sand and investment casings, and bar stock available

Surface Finish

- For polymer applications, Strahman recommends a surface facing of 300 (Ra 0.4) for all parts are in contact with the medium

Quality assurance & testing


- ISO 9001 Certified
- PED / ATEX / CE marking
- TUV / HPO / TA Luft
- Standard testing procedures

LINE & BRANCH CONNECTIONS

Soft Seal Valves can be equipped with the following end connections



Flanges ANSI,
DIN, JIS

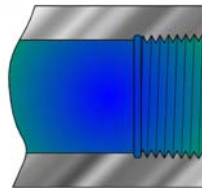

Threaded
connections
NPT & BSP

ACTUATION OPTIONS



Hand Wheel



Electric Actuator



Double or single
acting Air Cylinder



Air Motor

The Strahman family of products include:

SAMPLING VALVES

Strahman has a full line of sampling valves that produce live samples without exception. Our sampling valves unique design prevent failure caused by sediment or clogging.

DRAIN VALVES

Strahman Drain Valves are designed to prevent clogging. They are ideal for use in liquid and gas service or with slurries, polymers, and high viscosity fluids that tend to solidify at room temperature.

WASH DOWN EQUIPMENT

Strahman offers a full line of mixing units, hose stations, hoses, nozzles and wash down accessories. Our wash down line is designed for industrial use and is used in a wide variety of industries including food, beverage, pharmaceutical, chemical and other applications.

LINE BLINDS

Strahman Line Blinds provide zero leakage down stream and total isolation on process pipelines, vessels, and maritime applications. No pipeline movement is required when blind position is changed.

Please contact your local Strahman representative for further details
or
visit our website : www.strahmanvalves.com



Corporate Headquarters:

Strahman Valves, Inc. 2801 Baglyos Circle, Bethlehem, PA 18020
Tel: 484. 893.5080 • Fax: 484.893.5099

Strahman France:

Savoie Hexapole, F-73420, Mery, France
Tel: + 33 4 79 35 78 00 • Fax: + 33 4 79 35 78 20

Strahman German Office

Kirchstrasse 16, D-77855, Achern, Germany
Tel: +49 7841 6846530 • Fax: +49 7841 6846531

Last Updated: July, 2012



ISO 9001
QMI-SAI Global